


- 5 Extend your hand to the induction area and the product will work automatically. The maximum working time is 5 seconds at a time. When the induction area is opened, the product will stop working automatically.




USER GUIDE

Automatic Soap Dispenser

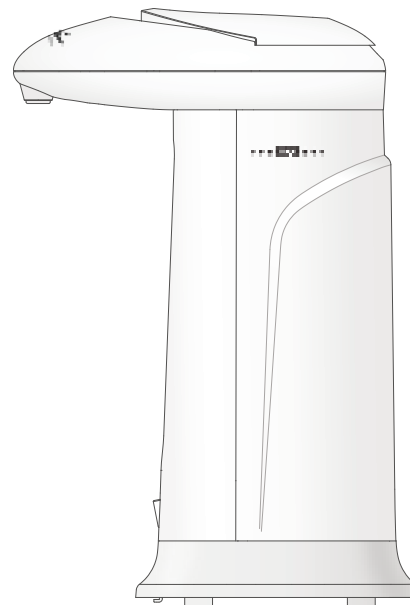


1

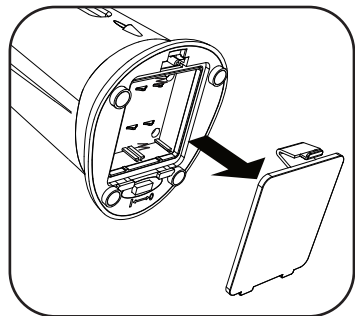

1 Open battery compartment.


2 Power supply method

- Load 4 AAA cell batteries (need to be purchased separately), please be noted do not mix the new and old batteries, do not mix carbon and alkaline batteries, not to use rechargeable batteries (such as nickel metal hydride, nickel chromium batteries, etc.).

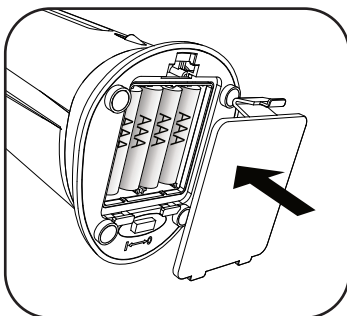


- Close battery compartment cover.

2

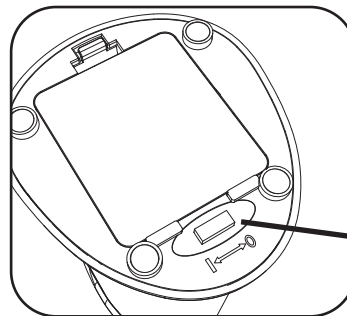

3 Switch to position 1 to get product started.

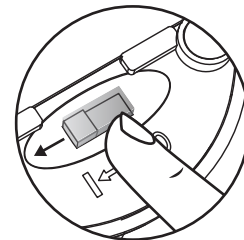

4 Pour in hand sanitizer

Pour in liquid soap (please be advised this machine only support regular liquid sanitizer and do not pour in high density gel or pure alcoholic liquid)

